


# RUNABOUT INSTALLATION

## Components & Hardware

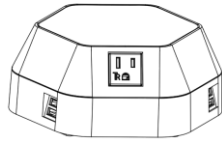

(A) Runabout  
Qty 1

## Tools Needed



**Note:** \*Do not overtighten if securing the runabout. Tighten by hand.

A Furniture Power Distribution Unit is not for permanent installation as part of the building structure and not for mounting in a permanently-installed furnishing such as a fixed countertop.

- 1-** Place Runabout (A) at desired location on work surface. Note: If Runabout is not intended to be secured to work surface proceed to Step 4.
- 2-** If secure mounting is desired, drill  $7/32''$  hole thru work surface at location Runabout is to be mounted. Note: Mounting PEM is centered on the underside of the Runabout.
- 3-** Insert appropriate length screw (for table thicknesses  $.75'' - 2''$  we recommend using an 8-32 x  $2 \frac{1}{2}''$ ) through the surface and into threaded hole on underside of Runabout. Tighten until Runabout is secure.\*
- 4-** Plug Runabout into power outlet.

